

DIAGRAM 1.0


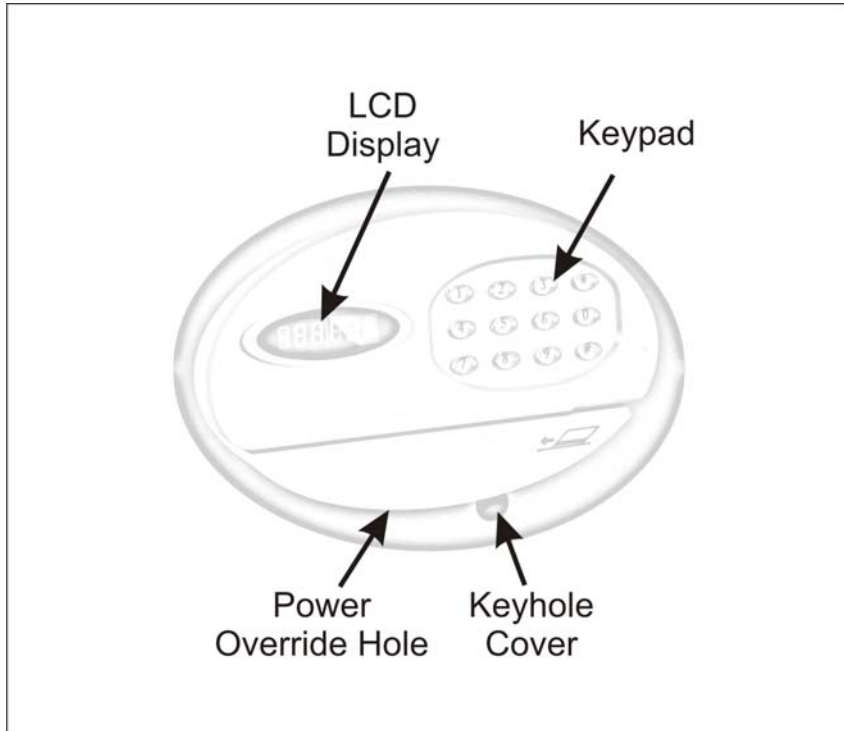


DIAGRAM 2.0

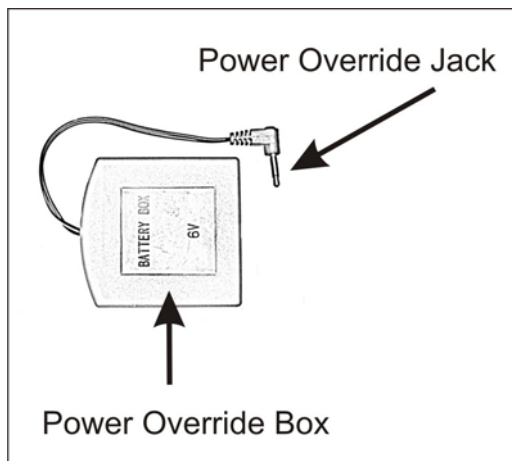

STEP 1 –

OPENING THE SAFE USING A CODE ONLY OPTION:

1. ENTER THE CODE. **FACTORY DEFAULT CODE IS: 1-2-3-4-5-6**
2. THE **LCD DISPLAY** WILL SHOW **OPEN**.
3. THE DOOR WILL AUTOMATICALLY OPEN.

OPENING THE SAFE USING A CARD ONLY OPTION:

1. PRESS THE **#** KEY.
2. THE **LCD DISPLAY** WILL SHOW **-CARD-**.
3. SWIPE YOUR CARD.
4. THE DOOR WILL AUTOMATICALLY OPEN.

OPENING THE SAFE USING A CARD PLUS CODE OPTION:

1. PRESS THE **#** KEY.
2. THE **LCD DISPLAY** WILL SHOW **-CARD-**.
3. SWIPE YOUR CARD.
4. THE **LCD DISPLAY** WILL SHOW **-CODE-**.
5. ENTER THE CODE.
6. THE DOOR WILL AUTOMATICALLY OPEN.

TO CLOSE THE SAFE, HOLD THE DOOR IN THE CLOSE POSITION AND PRESS THE **# KEY.**

ENROLLING:

STEP 2 – CODE ONLY

THIS STEP WILL SHOW YOU HOW TO ENROLL A CODE, YOU WILL NEED ONLY YOUR CODE TO OPEN THE SAFE, NO CARD REQUIRED.

1. WHILE THE DOOR IS OPEN PRESS THE ***** KEY TWICE AND THEN THE **1** KEY.
2. THE **LCD DISPLAY** WILL SHOW **-CODE-**.
3. NOW: (WHILE THE **LCD DISPLAY** SHOWS **-CODE-**)
 - a. ENTER YOUR NEW CODE (6 DIGITS).
 - b. THE **LCD DISPLAY** WILL SHOW **-GOOD-**.

STEP 3 – CARD ONLY

THIS STEP WILL SHOW YOU HOW TO ENROLL A CARD, YOU WILL NEED ONLY YOUR CARD TO OPEN THE SAFE, NO CODE REQUIRED.

1. WHILE THE DOOR IS OPEN PRESS THE ***** KEY TWICE AND THEN THE **6** KEY.
2. THE **LCD DISPLAY** WILL SHOW **-CARD-**.
3. NOW: (WHILE THE **LCD DISPLAY** SHOWS **-CARD-**)
 - a. SWIPE YOUR NEW CARD.
 - b. THE **LCD DISPLAY** WILL SHOW **-GOOD-**.
 - c. IN CASE THE DISPLAY SHOWS **-AGAIN-**, PLEASE SWIPE YOUR CARD AGAIN UNTIL DISPLAY SHOW **-GOOD-**.

STEP 4 – CARD PLUS CODE

THIS STEP WILL SHOW YOU HOW TO ENROLL A CARD AND A CODE, YOU WILL NEED BOTH YOUR CARD AND CODE TO OPEN THE SAFE.

4. WHILE THE DOOR IS OPEN PRESS THE * KEY TWICE AND THEN THE 0 KEY.
5. THE **LCD DISPLAY** WILL SHOW **-CODE-**.
6. **NOW:** (WHILE THE **LCD DISPLAY** SHOWS **-CODE-**)
 - a. ENTER YOUR NEW CODE (6 DIGITS)
 - b. THE **LCD DISPLAY** WILL SHOW **-CARD-**.
 - c. SWIPE YOUR NEW CARD.
 - d. THE **LCD DISPLAY** WILL SHOW **-GOOD-**.

IN CASE THE DISPLAY SHOWS **-AGAIN-**, PLEASE SWIPE YOUR CARD AGAIN UNTIL DISPLAY SHOW **-GOOD-**.

STEP 5 – MASTER CODE

THIS STEP WILL SHOW YOU HOW TO ENROLL A MASTER CARD AND A CODE.

7. WHILE THE DOOR IS OPEN PRESS THE 0 KEY TWICE AND THEN THE # KEY.
8. THE **LCD DISPLAY** WILL SHOW **-CODE-**.
9. **NOW:** (WHILE THE **LCD DISPLAY** SHOWS **-CODE-**)
 - a. ENTER YOUR NEW MASTER CODE (6 DIGITS)
 - b. THE **LCD DISPLAY** WILL SHOW **-GOOD-**.

EMERGENCY OPENING:

KEY OVERRIDE:

1. REMOVE THE RUBBER **KEYHOLE COVER**.
2. INSERT THE EMERGENCY KEY.
3. TURN THE KEY CLOCKWISE (RIGHT) AND THEN OPEN THE SAFE.

POWER OVERRIDE:

1. INSTALL 4 NEW BATTERIES IN THE **POWER OVERRIDE BOX**.
2. PLUG THE **POWER OVERRIDE JACK** INTO THE **POWER OVERRIDE HOLE**.
3. OPEN THE SAFE BY FOLLOWING **STEP 1**.
4. OPEN BATTERY COVER AND INSTALL 4 NEW BATTERIES.
5. CLOSE BATTERY COVER, THE SAFE GOES BACK TO NORMAL OPERATION MODE.

TIPS:

- USE THE * KEY TO CLEAR THE SCREEN.
- IF YOU ENTER A WRONG CODE THE **LCD DISPLAY** WILL SHOW **ERROR**.
- IF YOU ENTER A WRONG CODE FOR THREE CONSECUTIVE TIMES THE **LCD DISPLAY** WILL SHOW **ERROR** AND THE SAFE WILL BE LOCKED FOR 5 MINUTES. AFTER 5 MINUTES THE SAFE WILL RETURN TO NORMAL OPERATION MODE.
- WHEN THE **LCD DISPLAY** SHOWS **LO-BAT** IT IS HIGHLY RECOMMENDED TO CHANGE THE BATTERIES AS SOON AS POSSIBLE.



PROTEX
SAFE CO., LLC

■ Manufacturing ■ Distribution ■ Wholesale

USER'S MANUAL FOR ELECTRONIC HOTEL SAFE

MODELS:

BG-30C

REV. 082807