

DIAGRAM 1.0


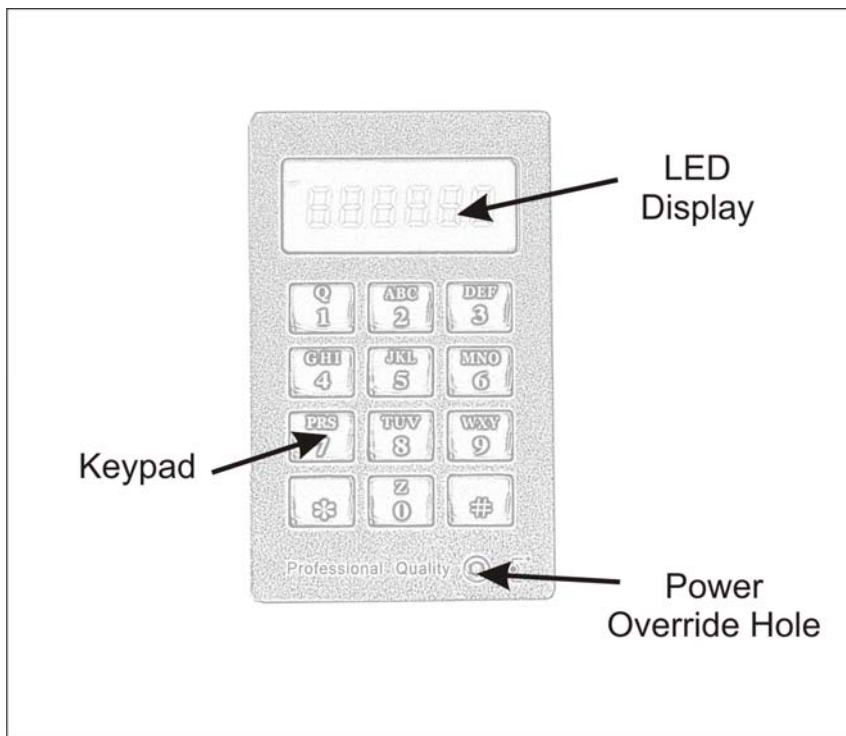


DIAGRAM 2.0

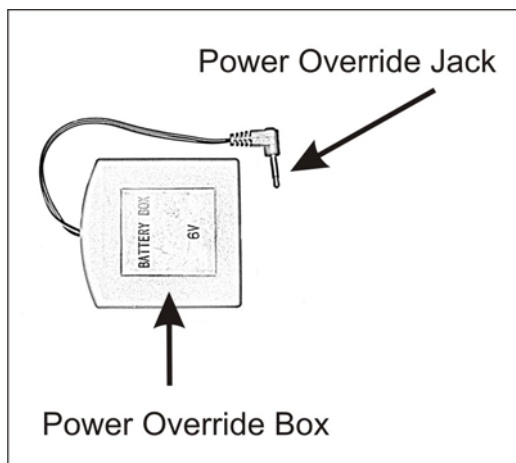

WELCOME:

STEP 1 – OPENING THE SAFE:

1. Install the 4 AA batteries in the Power Override Box. We recommend using high-quality batteries such as Duracell or Energizer.
2. Plug the Power Override Jack to the Power Override Hole.
3. Enter code. Factory default code is: 1-2-3-4
4. If the correct code is entered, the LED Display will show "OPEN". If a wrong code was entered the LED Display will show "E-CODE". Please re-enter the correct code again.
5. The door will automatically open and the display will show "OPENED" for 4 seconds.

NOTE: Remove the batteries from the Power Override Box and install them in the battery box that is located in the back of the safe door.

ENROLLING:

STEP 2 – CHANGING USER CODE:

1. Open the safe using the code.
2. Enter your new 4-Digit code and press the # key.

STEP 3 – CHANGING MASTER CODE:

1. Open the safe using the code.
2. Enter your existing master code. Factory default code is: 8-8-8-8-8-8
3. Press the # key. The LED Display will show "NEU".
4. Enter your new 6-Digit master code and press the # key. The LED Display will show "AGAIN".
5. Enter your new 6-Digit master code again and press the # key. If procedure is successful LED Display will show "DONED", in case of a wrong code the LED Display will show "E-CODE". Please repeat steps 2 thru 5.

## EMERGENCY OPENING:

### POWER OVERRIDE:

1. Open the safe by following STEP 1.

### KEY OVERRIDE:

1. Gently unscrew the Chrome Keyhole Cap (located near the keypad), this will reveal the Keyhole.
2. Insert the key with notch pointing upwards and turn the key counter-clockwise (left) to open the safe.

**Note:** The safe keeps the code in memory up to 6 months without power.

### TIPS:

- Use digits 1 – 0 to enter your code.
- Use the \* (star key) as backspace to clear the last digit.
- When the LED Display shows "LO-BAT" it is highly recommended to change the batteries as soon as possible.



# User Manual For Electronic safe

Models:

RAQ Keypad